 


Sheath Thermocouple


Model No. SS-5020 Series

Weather Proof Head Type


Model No. | SS-5021W
(Sheath)

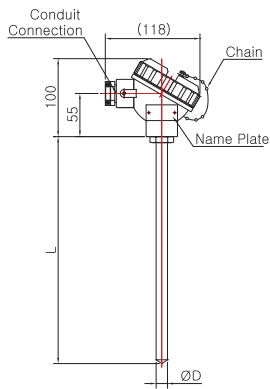


Model No. | SS-5022W
(Sheath)

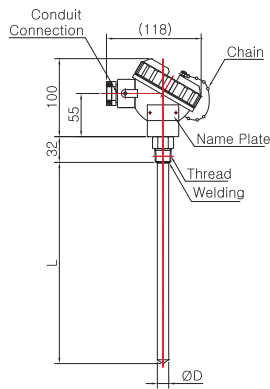 


Model No. | SS-5022W-1
(Sheath)

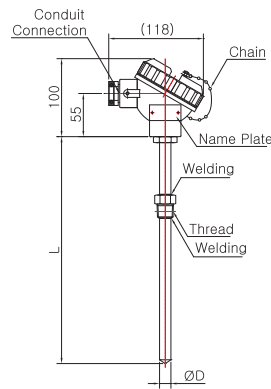 


Model No. | SS-5022W-2
(Sheath)

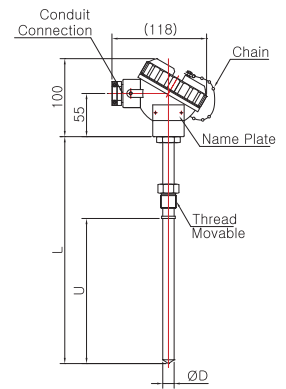 


Model No. | SS-5022W-3
(Sheath)

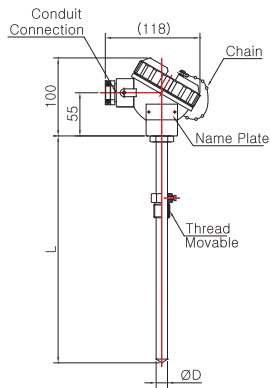 


Model No. | SS-5022W-4
(Sheath)

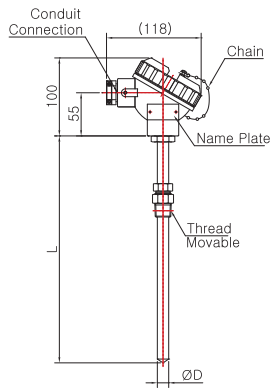 


Model No. | SS-5023W
(Sheath)

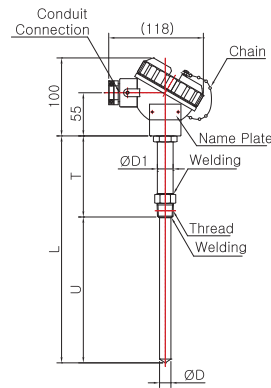 


Model No. | SS-5023W-1
(Sheath)

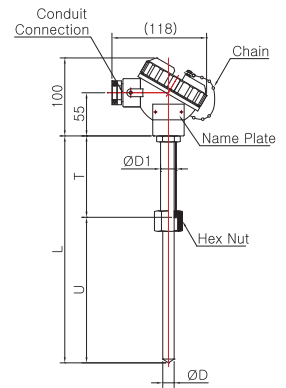 


Model No. | SS-5024W-1
(Sheath)

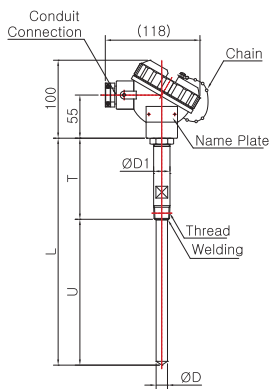 


Model No. | SS-5024W-1-1
(Sheath Spring Load)

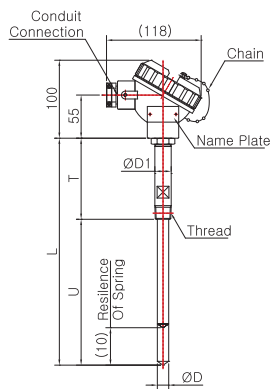 

Model No. | SS-5024W-2
(Sheath)

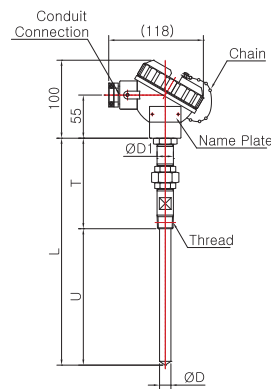 


Model No. | SS-5024W-2-1
(Sheath Spring Load)

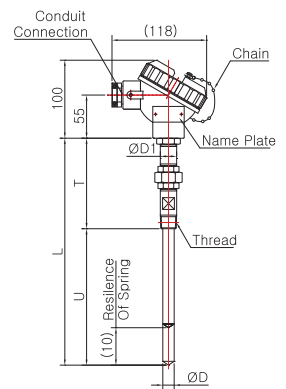 


Pressure Gauge
Differential Pressure Gauge & Switch
Accessories of Pressure Gauge
Thermometer & Thermometer Switch
Thermocouple & R.T.D
Thermowell
Transmitter
Indicator etc.
Technical data

Weather Proof Head Type


Model No. | SS-5025W
(Sheath)

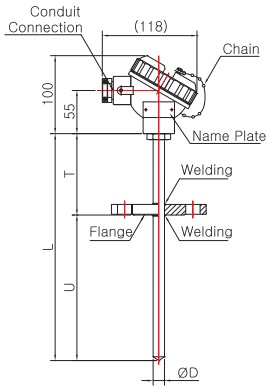 


Model No. | SS-5025W-1
(Sheath)

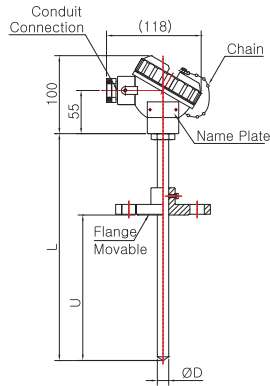 


Model No. | SS-5026W-1
(Sheath)

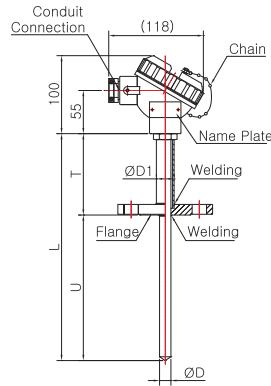 


Model No. | SS-5026W-1-1
(Sheath Spring Load)

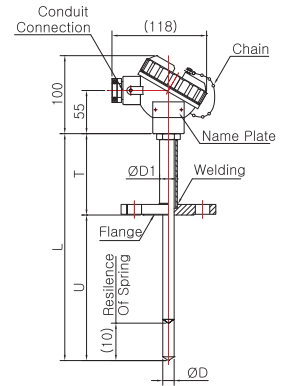 


Model No. | SS-5026W-2
(Sheath)

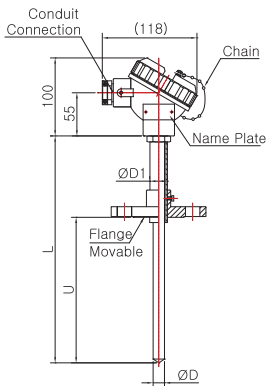 


Model No. | SS-5026W-3
(Sheath)

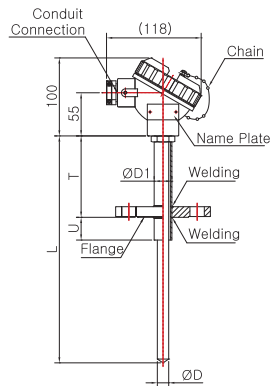 


Model No. | SS-5029W
(Sheath)

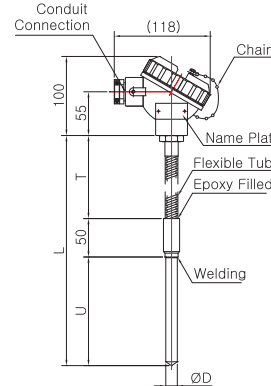 

Model No. | SS-5029W-1
(Sheath)

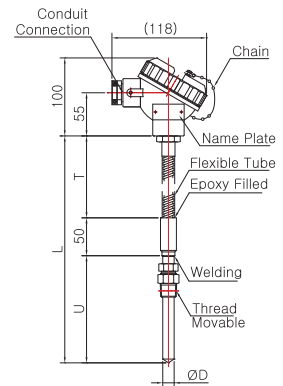 

Model No. | SS-5029W-3
(Sheath)

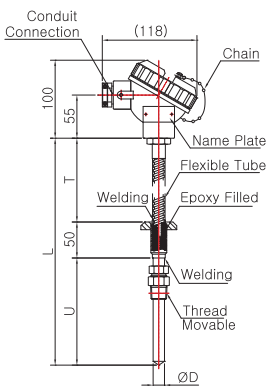 

Pressure Gauge

Differential Pressure Gauge & Switch

Accessories of Pressure Gauge

Thermometer & Thermometer Switch

Thermocouple & R.T.D

Thermowell

Transmitter

Indicator etc.


Technical data

Sheath Thermocouple


Model No. SS-5020 Series

Explosion Proof Head Type (Ex d IIC T6)


Model No. | SS-5021E
(Sheath)

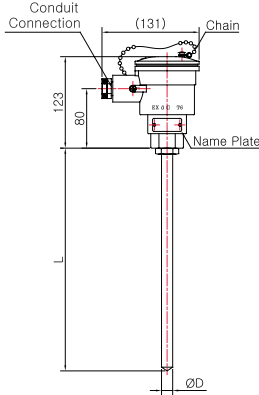 


Model No. | SS-5022E
(Sheath)

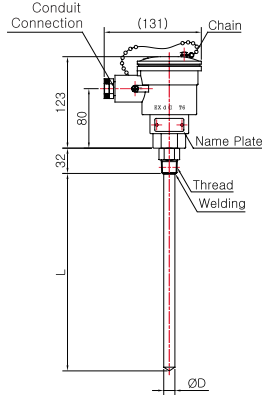 


Model No. | SS-5022E-1
(Sheath)

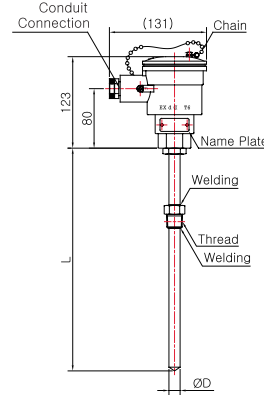 


Model No. | SS-5022E-2
(Sheath)

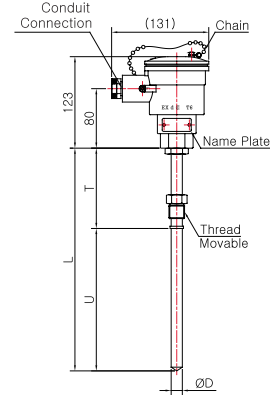 


Model No. | SS-5022E-3
(Sheath)

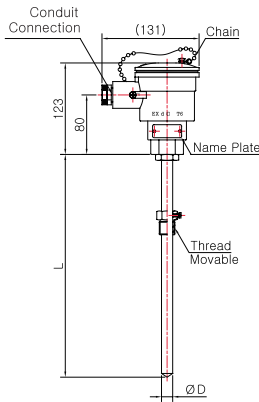 


Model No. | SS-5022E-4
(Sheath)

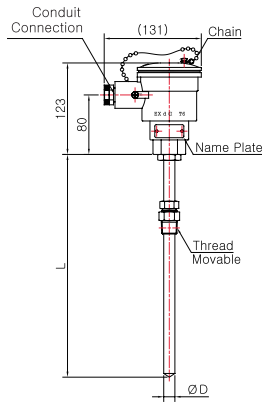 


Model No. | SS-5023E
(Sheath)

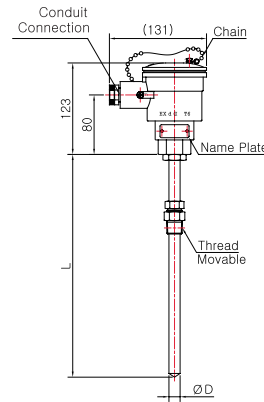 


Model No. | SS-5023E-1
(Sheath)

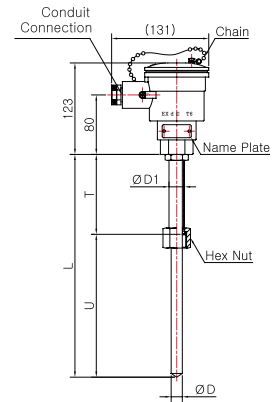 


Model No. | SS-5024E-1
(Sheath)

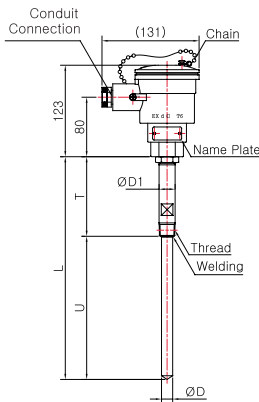 


Model No. | SS-5024E-1-1
(Sheath Spring Load)

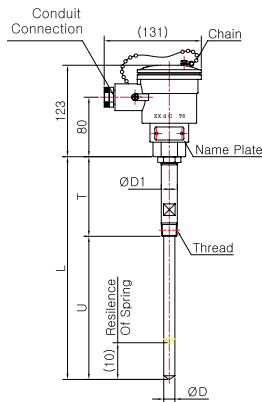 

Model No. | SS-5024E-2
(Sheath)

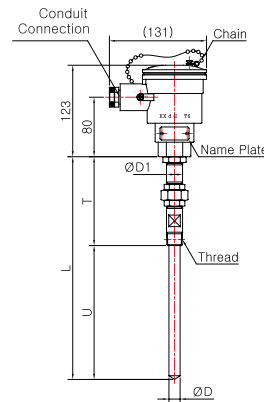 


Model No. | SS-5024E-2-1
(Sheath Spring Load)

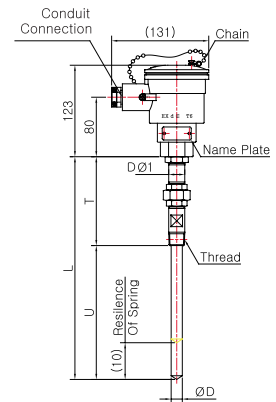 


Pressure Gauge
Differential Pressure Gauge & Switch
Accessories of Pressure Gauge
Thermometer & Thermometer Switch
Thermocouple & R.T.D.
Thermowell
Transmitter
Indicator etc.
Technical data

Explosion Proof Head Type (Ex d IIC T6)


Model No. | SS-5025E
(Sheath)

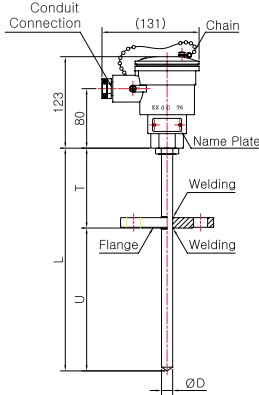 


Model No. | SS-5025E-1
(Sheath)

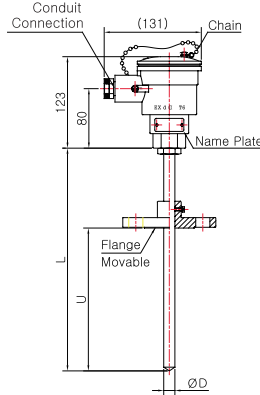 


Model No. | SS-5026E-1
(Sheath)

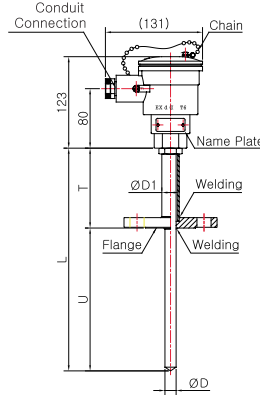 


Model No. | SS-5026E-1-1
(Sheath Spring Load)

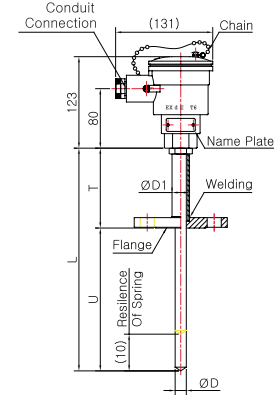 


Model No. | SS-5026E-2
(Sheath)

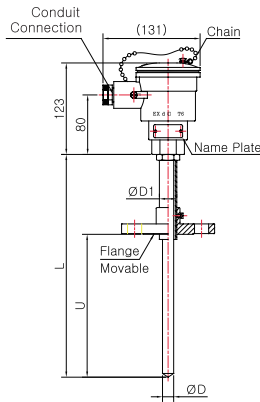 


Model No. | SS-5026E-3
(Sheath)

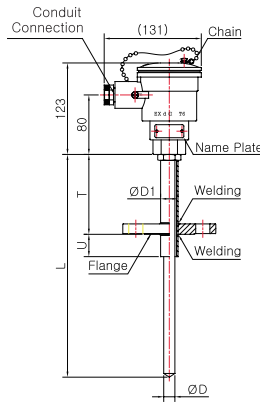 


Model No. | SS-5029E
(Sheath)

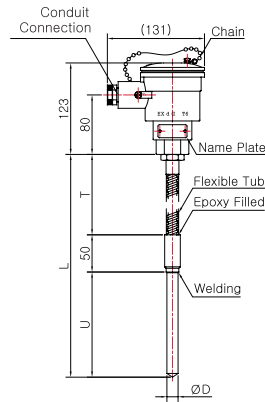 

Model No. | SS-5029E-1
(Sheath)

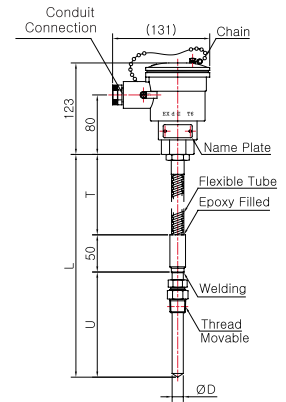 

Model No. | SS-5029E-3
(Sheath)

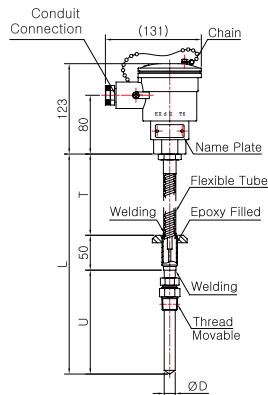 

Pressure Gauge

Differential Pressure Gauge & Switch

Accessories of Pressure Gauge

Thermometer & Thermometer Switch

Thermocouple & R.T.D

Thermowell

Transmitter

Indicator etc.


Technical data

Sheath Thermocouple


Model No. SS-5020 Series

General Purpose Head Type


Model No. | SS-5021S
(Sheath)

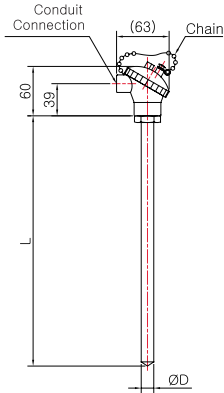 


Model No. | SS-5022S
(Sheath)

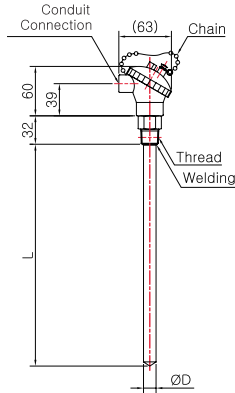 


Model No. | SS-5022S-1
(Sheath)

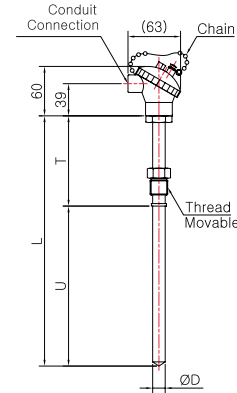 


Model No. | SS-5022S-2
(Sheath)

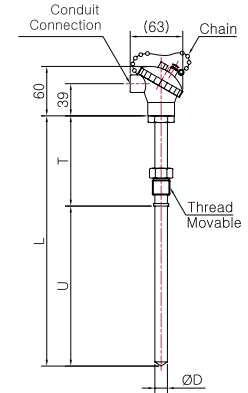 


Model No. | SS-5022S-3
(Sheath)

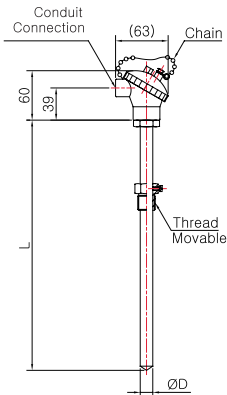 


Model No. | SS-5022S-4
(Sheath)

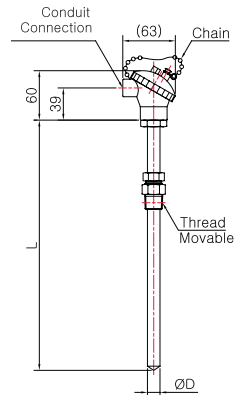 


Model No. | SS-5023S
(Sheath)

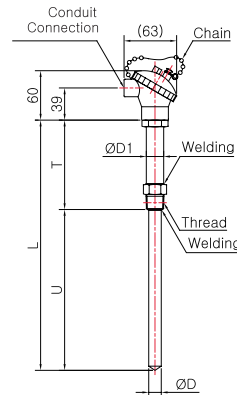 


Model No. | SS-5023S-1
(Sheath)

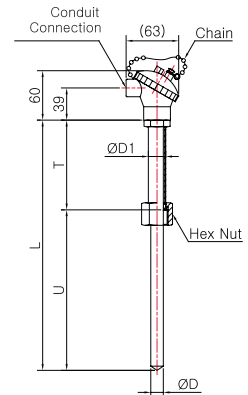 


Model No. | SS-5024S-1
(Sheath)

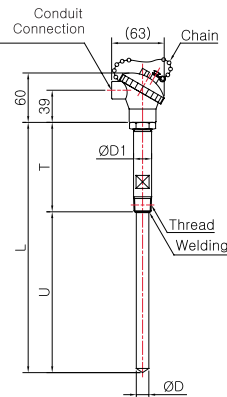 


Model No. | SS-5024S-1-1
(Sheath Spring Load)

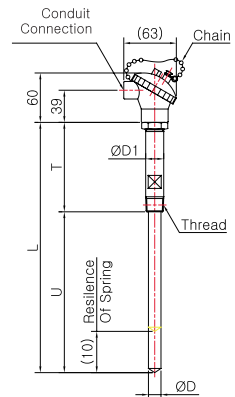 

Model No. | SS-5024S-2
(Sheath)

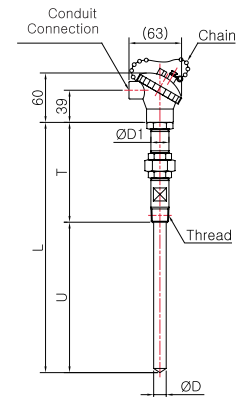 


Model No. | SS-5024S-2-1
(Sheath Spring Load)

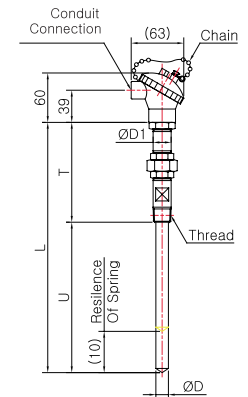 


Pressure Gauge
Differential Pressure Gauge & Switch
Accessories of Pressure Gauge
Thermometer & Thermometer Switch
Thermocouple & R.T.D.
Thermowell
Transmitter
Indicator etc.
Technical data

General Purpose Head Type


Model No. | SS-5025S
(Sheath)

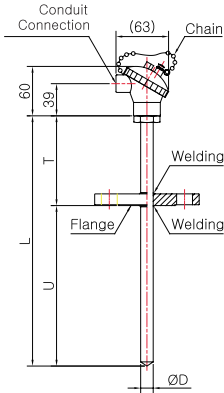 


Model No. | SS-5025S-1
(Sheath)

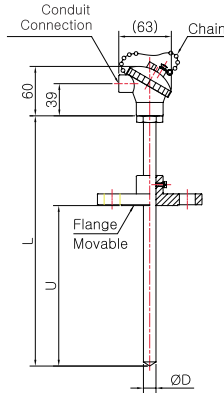 


Model No. | SS-5026S-1
(Sheath)

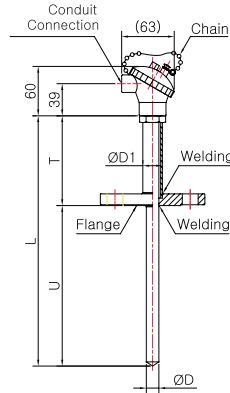 


Model No. | SS-5026S-1-1
(Sheath Spring Load)

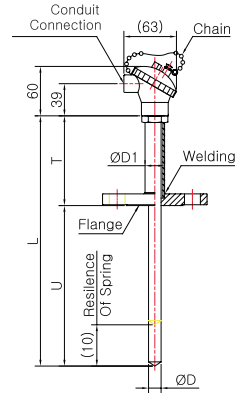 


Model No. | SS-5026S-2
(Sheath)

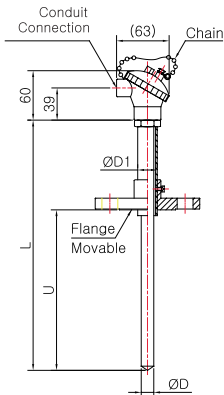 


Model No. | SS-5026S-3
(Sheath)

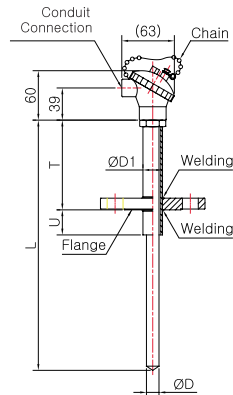 


Model No. | SS-5029S
(Sheath)

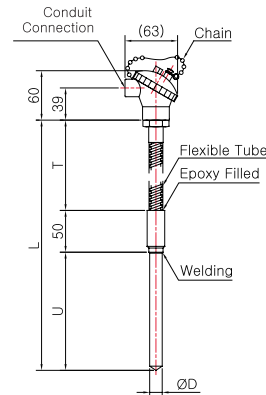 

Model No. | SS-5029S-1
(Sheath)

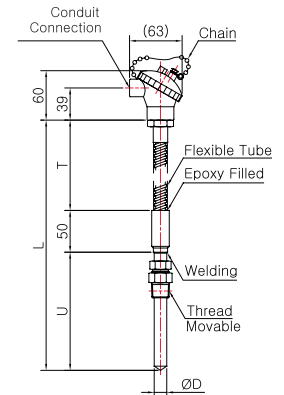 

Model No. | SS-5029S-3
(Sheath)

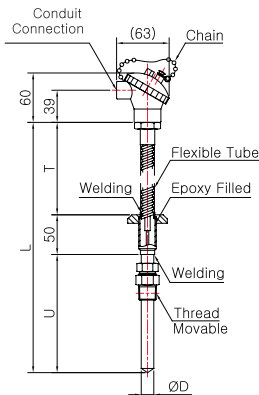 

Pressure Gauge

Differential Pressure Gauge & Switch

Accessories of Pressure Gauge

Thermometer & Thermometer Switch

Thermocouple & R.T.D

Thermowell

Transmitter

Indicator etc.


Technical data

Sheath Thermocouple


Model No. SS-5020 Series

Extension Lead Wire Type


Model No. | SS-5028GA
(Basic)

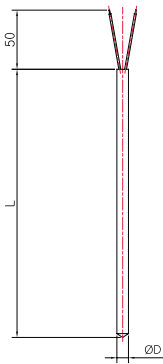 


Model No. | SS-5028GB
(Compensating Lead Wire)

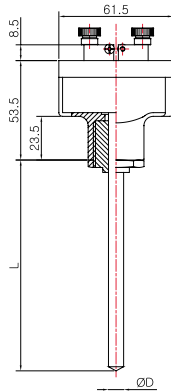 


Model No. | SS-5028GC
(Compensating Lead Wire)

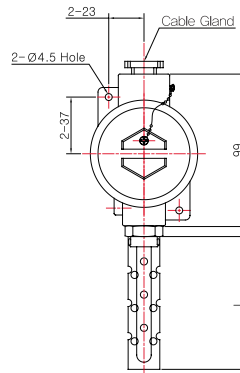 


Model No. | SS-5028GD
(Sheath)

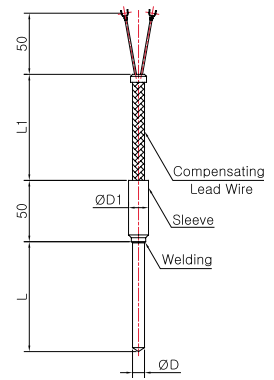 


Model No. | SS-5028GD-1
(Compensating Lead Wire)

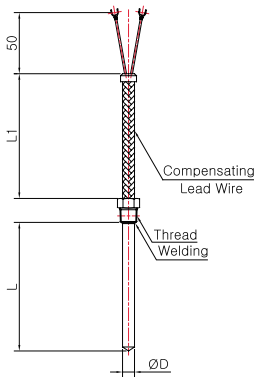 


Model No. | SS-5028GD-2
(Sheath)

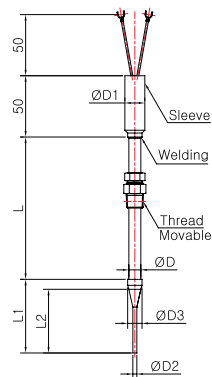 


Model No. | SS-5028GDT
(Compensating Lead Wire)

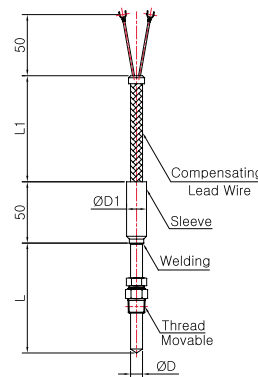 


Model No. | SS-5028GE
(Flexible Tube)

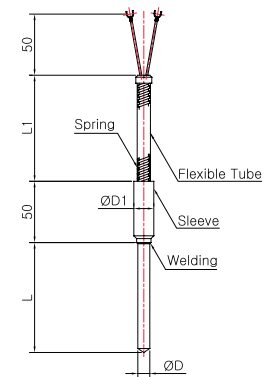 


Model No. | SS-5028GET
(Flexible Tube)

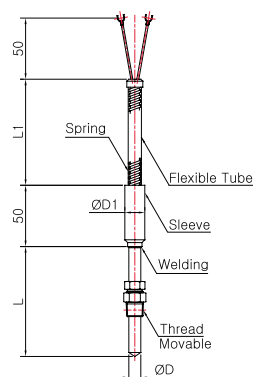 


Model No. | SS-5028GF
(Bayonet Mount)

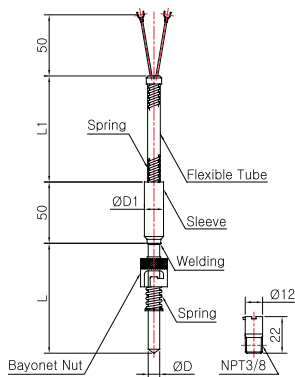 

Model No. | SS-5028GG
(Quick Connector)

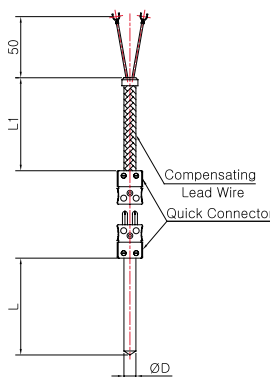 


Model No. | SS-5028GH
(Metal Connector)

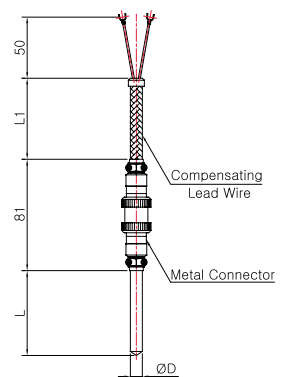 


Special Type


Model No. | SS-5029W-A

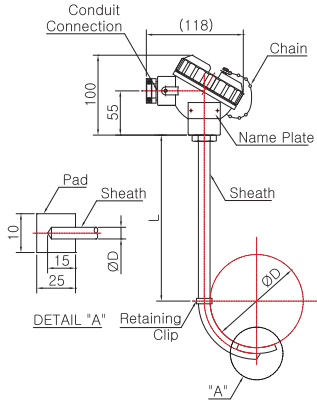 


Model No. | SS-5029W-B

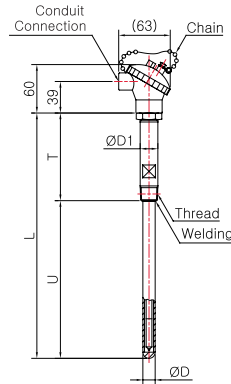 


Model No. | SS-5029E-A

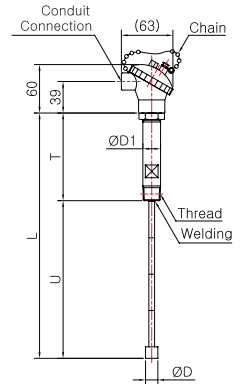 


Model No. | SS-5029E-B

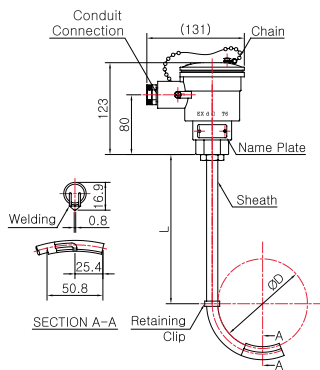 

Model No. | SS-5028GDF

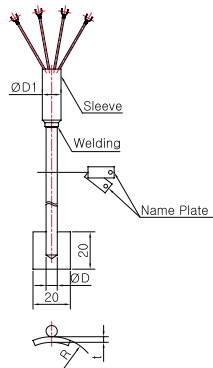 

Model No. | MULTI

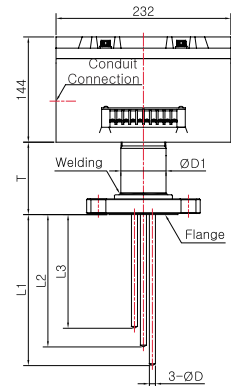 

Pressure Gauge

Differential Pressure Gauge & Switch

Accessories of Pressure Gauge

Thermometer & Thermometer Switch

Thermocouple & R.T.D

Thermowell

Transmitter

Indicator etc.

Technical data